

CONTENTS

3G-SDI Splitter,



User's Manual

Contents	1-1
Specification / supporting resolution	1-2
Installation	1-3
Warranty Information	1-4
Troubleshooting	1-5

Specification

ITEM	DESCRIPTION
SD Input port	1 (one)
SD Output port	6 (six)
VIDEO Input format	YCbCr (422)
VIDEO Output format	YCbCr (422)
Input format AUDIO	AES/EBU / 48Khz
Power	7~25V DC
Dimension	105 x 95 x 25 (mm)
Weight	0.2Kg

Supporting resolution

SMPTE	Video Formats
SMPTE-424M	3G : 1920*1080p(60/59.94/50)
SMPTE-274M	HD : 1920*1080i (60/59.94/50)
SMPTE-274M	HD : 1920*1080p (30/29.97/25/24/23.98)
SMPTE-296M	HD : 1280*720p (60/59.94/50)
SMPTE-125M	SD : 480i (NTSC)
SMPTE-125M	SD : 576i (PAL)

1-2 Specification / Supporting Resolution

Installation

STEP1

Plug the AC/DC adapter to AC inlet and connect to receptacle on the product.

STEP2

Connect SDI source to SDI input port of SDIS-16S with BNC coaxial cable.

STEP3


Connect HD/SD SDI display to SDI output port of SDIS-16S with BNC coaxial cable.

Note.1

Auto equalizing (HD grade: signal compensation up to 100m, SD: up to 300m with Belden 1694 Cable)

Note.2

According to the connected signal (SD/HD), you can find the LED status.

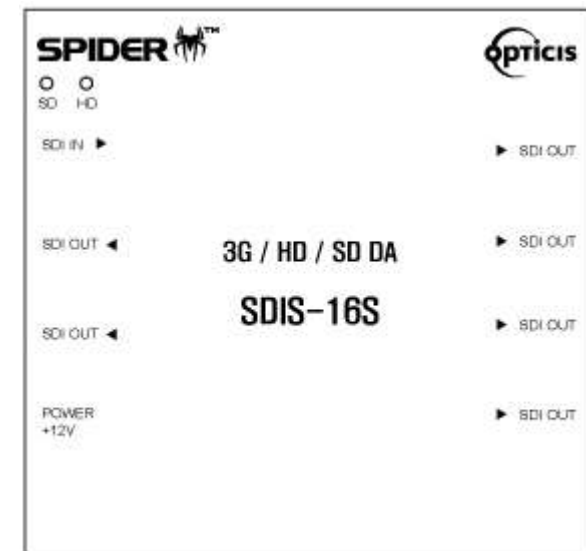

1-3 Installation

Warranty Information

1 (One) Year Warranty

OPTICIS warrants OPTICIS SDIS-16S 3G-SDI splitter to be free from defects in workmanship and materials, under normal use and service, for a period of one (1) year from the date of purchase from OPTICIS or its authorized resellers.

If a product does not work as warranted during the applicable warranty period, OPTICIS shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product.

All products that are replaced will become the property of OPTICIS.

Replacement products may be new or reconditioned.

Any replaced or repaired product or part has a ninety (90) day warranty or the reminder of the initial warranty period, whichever is longer.

OPTICIS shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to OPTICIS for repair under warranty or not.

Warranty Limitation and Exclusion

OPTICIS shall have no further obligation under the foregoing limited warranty if the product has been damaged due to abuse, misuse, neglect, accident, unusual physical or electrical stress, unauthorized modifications, tampering, alterations, or service other than by OPTICIS or its authorized agents, causes other than from ordinary use or failure to properly use the Product in the application for which said Product is intended.

Troubleshooting

Problem	Remedy Actions
Splitter does not Operate	Make sure the 12V power supply is plugged firmly to DC receptacle and AC inlet. Check if the white LED light is on.
No picture (or signal) Or Poor picture	1. Check that your source and output devices are turned on and connected properly. The input of your machine should be of an identical signal format or standards as the output of your source. Signals at the output of your machine should be of an identical signal format or standards as the input of your display. 2. Check that any other device in the signal path has the proper input or output selected. 3. Check the maximum cable length was not exceeded. 4. Reboot the splitter.

